

The *IcIA Easy* commissioning software runs with the IcIA® Intelligent Compact Drives, and can be used for commissioning support, product presentation, diagnostics and testing.

### Supported compact drives

*IcIA Easy* supports the following Intelligent Compact Drives:

- ☑ IcIA® IFS
- ☑ IcIA® IFE
- ☑ IcIA® IFA
- ☑ IcIA® IDS (for diagnostics only, and over the RS485 communications port only)

### Functions

- Input and display of device parameters
- Archiving and duplication of device parameters
- Display of status and device information
- Positioning the motor with the PC
- Triggering reference movements
- Optimizing closed loop controller parameters (only with IcIA IFA)
- Access to all documented parameters
- Diagnosis of operating faults

### Compact drive interfaces

*IcIA Easy* communicates with the compact drives via a field bus converter. The following communications options are available:

Compact drive	PC	Required field bus converter	Reference source
RS485	USB	NuDAM ND-6530	<a href="http://www.acceed.com">www.acceed.com</a>
RS485	RS232	NuDAM ND-6520	<a href="http://www.acceed.com">www.acceed.com</a>
CAN	USB	PCAN-USB, Peak	<a href="http://www.peak-system.com">www.peak-system.com</a>
CAN	parallel	PCAN-Dongle, Peak	<a href="http://www.peak-system.com">www.peak-system.com</a>
Profibus-DP	PCMCIA	Siemens CP5511/12	<a href="http://www.ad.siemens.com">www.ad.siemens.com</a>
Profibus-DP	PCI	Siemens CP5611/13	<a href="http://www.ad.siemens.com">www.ad.siemens.com</a>
Profibus-DP	USB	Softing PROFusb	<a href="http://www.softing.com">www.softing.com</a>

**Caution:** IcIA Easy may only be used in a fieldbus network if other masters are switched off or inactive. The usage in a running system is not allowed.

### System requirements

The minimum hardware requirements for setup and operation of the software are as follows:  
IBM compatible PC with Pentium processor.

- 128 MB RAM
- ca. 10 MB free memory on the hard disk
- Data exchange requires a field bus converter and a cable set for the compact drive or a cable connection to your field bus network.

*IcIA Easy* runs with a PC using the Microsoft Windows 2000/XP operating systems.

### Installation

- Load the installation file from the download page internet on [www.Berger-Lahr.com](http://www.Berger-Lahr.com).
- Start the installation by double-clicking on „IcIA\_easy\_VXXXX\_YY.msi“.
- The installation program guides you through the installation step-by-step.

When *IcIA Easy* has been installed, you can start it from the start icon in the task bar. The *IcIA Easy* entry is in the program list under “Start→Programs→Berger Lahr→IcIA Easy“.